


---

*Before ordering Perfect Fit blinds, you should check a few things first. Make sure there is 25mm of clearance from the window beading to any obstruction such as handles or vents.*

*When ordering perfect fit blinds it is the size of the visible glass that must be measured. Measurement must not include the rubber bead or any seals.*

---

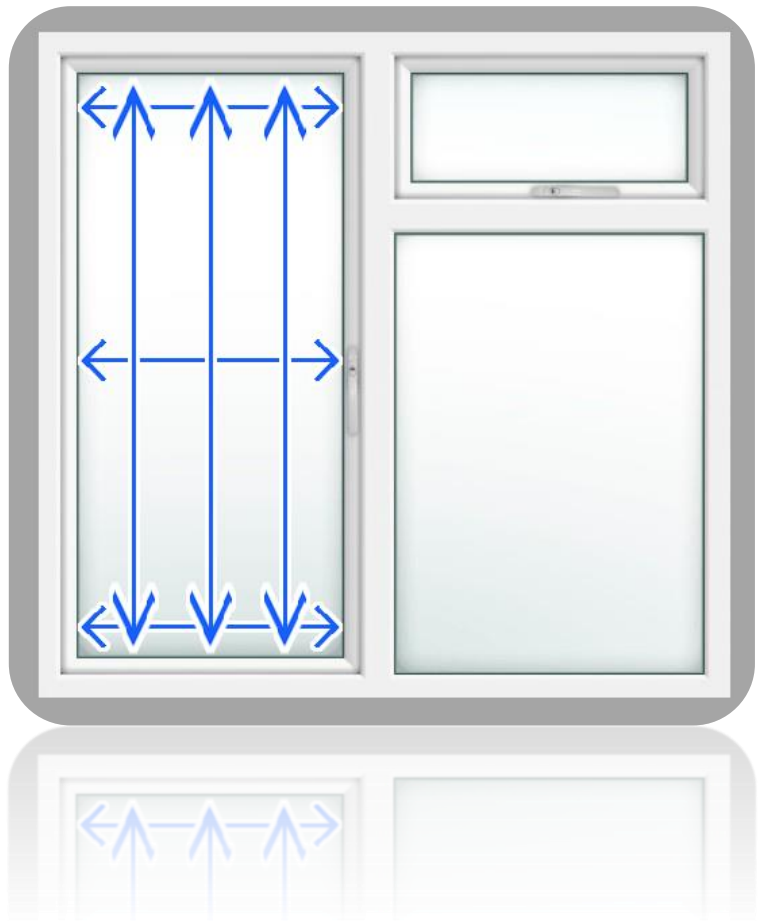

---

*Next check the depth of the window from the glass to the frame. To do this, place a store card onto the facing window frame and measure the depth from the glass to the frame with a metal tape measure, other measuring devices can be used. The depth should be between 18-32mm. If your depth is outside of this range, please contact us to discuss further options. When ordering select the appropriate bracket size, these come in 2mm intervals from 18mm upwards.*

---